


RAZOR ROLLOVER TARP OPERATING INSTRUCTIONS


- **Basic Operation:** The Razor Rollover tarp can be operated by way of the main control pad located on your truck or trailer bin or by wireless remote.
- **Main Keypad-** You must first hold the **STOP** button down for 2 seconds until **RED** led flashes twice. This will wake up or “initiate” the unit. The blue arrow on the main keypad opens the tarp (uncovers the load). The green arrow closes the tarp (covers the load). The stop button can be used at any time to stop the tarp. The motor will automatically stop when the tarp reaches its full travel
- **Wireless Remote-** By holding the No.1 (**STOP** button) this will initiate the unit. The No. 3 the **BLUE** button will open the tarp (uncover the load) pressing No.2 the **GREEN** button will close the tarp (cover the load). The STOP button can be used at anytime.


LED Operation on Main Keypad: There are 3 LED’s located on the main keypad. They are: **Orange-Service Light**, **Red-Operation Light** and **Green-Charge Light**. (See Pic)

- **Orange - Service Light-** This light may flash while the motor is driven and current is being drawn from the battery. If the orange light continues to flash after the motor has stopped or the motor will not run and the light flashes, the battery may be low on voltage. If the service light continues to flash, contact your authorized agent.
- **Red - Operation Light-** This light will flash once when the tarp motor is operated in either direction. The light will flash again when the motor stops.
- **Green - Charge Light-** The charge circuit will be connected to either your clearance lights or aux circuit (for further information contact your trailer builder/ installer). When the charge circuit is active it will flash to say the battery is charging and illuminate solid once the battery is full. If for some reason this light is not operating it may cause a flat battery. Contact your nearest agent for further information. (As a guide winding the tarp over and back would require approx. 10 minutes charge time)

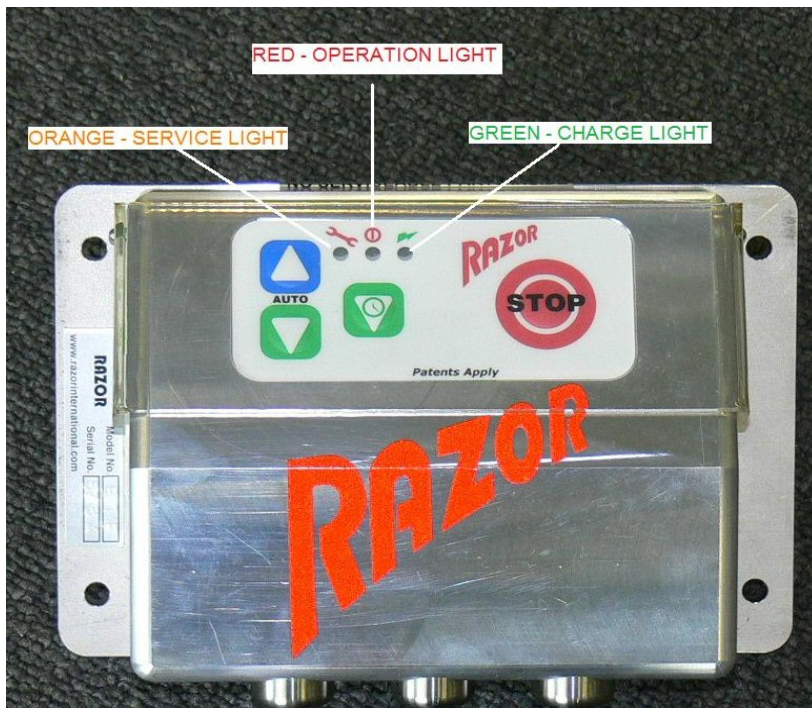

- **Manual Override-** The Razor Rollover Tarp can be manually operated in the case of emergencies. (See Pic)
 - ***Step one:** Undo brake at least one full turn
 - ***Step two:** Remove manual over ride plug
 - ***Step three:** Using hex key or manual handle, wind tarp as required

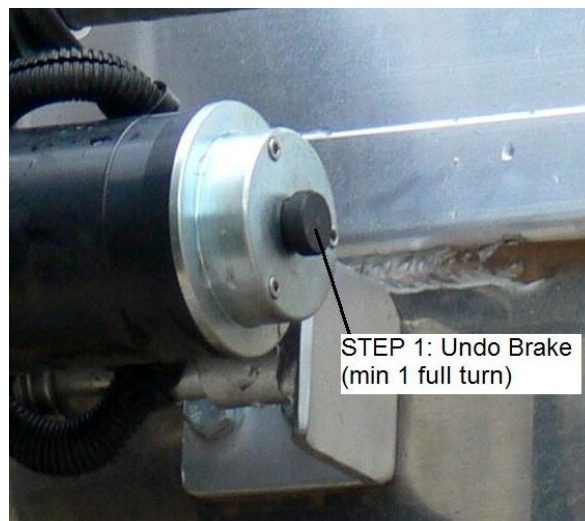

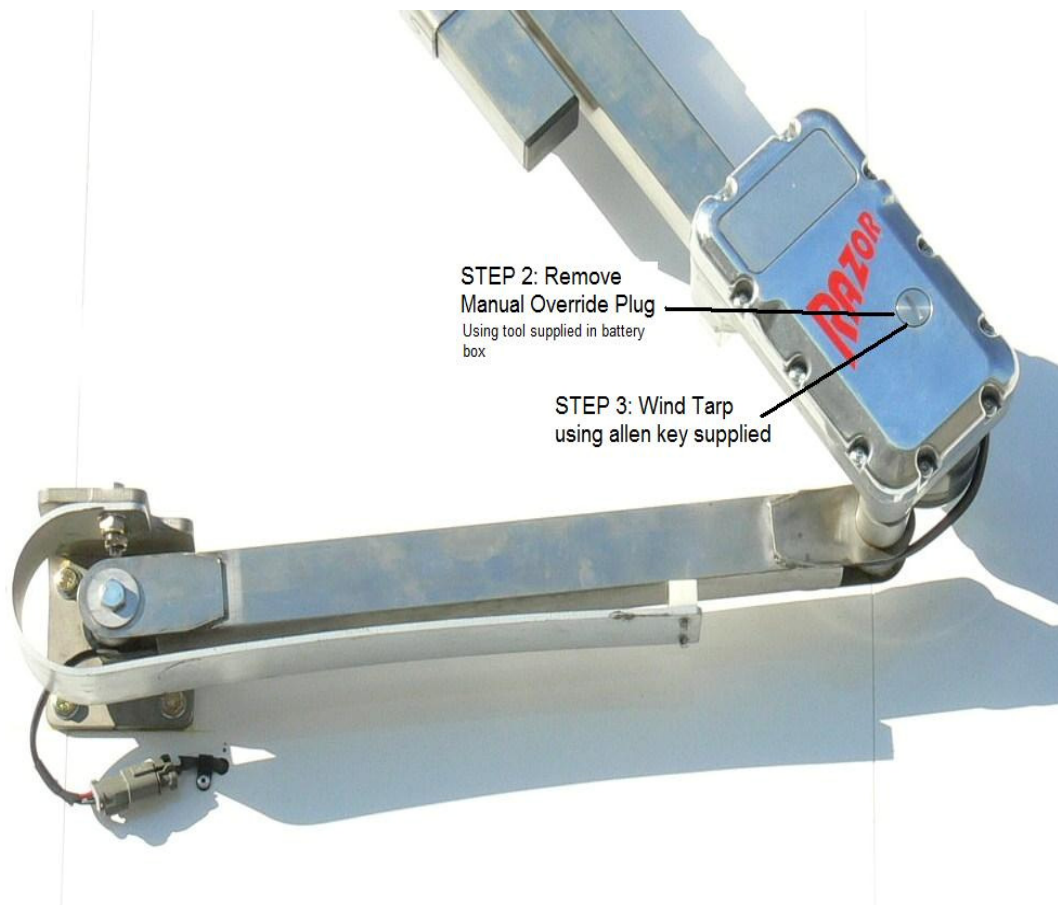

WARNING – The manual override is only to be used as a last resort and Razor International take no responsibility for the tarp being operated in an unsafe manner. Contact your dealer immediately if the razor tarp happens to stop working.

Maintenance: Razor Rollover Tarp requires minimal maintenance.

- **Battery** - To ensure trouble free operation. Check charge circuit daily to ensure the battery is being properly charged and the **GREEN CHARGE LIGHT** is flashing.
- **Tarp Tension-** Tarp tension is maintained by the Razor Motor Controller and no maintenance is required.

For any further information please contact your nearest authorized agent.

ENJOY SAFE & EASY TRUCKING WITH RAZOR POWER TARPS.