



Technical Bulletin: 5


Revision: 1

Razor International Pty Ltd, Campbellfield VIC
service@razorinternational.com
1300 555 865

Wireless Remote Pairing (ECAP14)

Affected Product: ECAP14

Wireless Pairing:

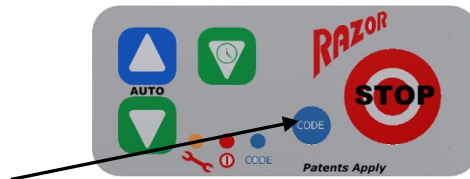

1. Press and hold "Code" button on the main keypad, indicated by one red flash initially (Red), followed by a continuous blue light. ○ ○ ● (Blue).

Note: there are two versions of remote with same function but different orientation which are Vertical and Horizontal Remote as above images.

Vertical Remote



Horizontal Remote



2. Press blue "UP" button on the remote three times. The main keypad on the controller should flash all three lights twice (Yellow + Red + Blue). ● ● ● (Blue)
This indicates the remote is now keyed.

Note: If the lights on the main keypad do not flash, then repeat STEP 1 and 2.

Wireless Unpairing:

To unkey the wireless remote, simply press and hold the blue "code" button (10 seconds approximately) on controller, indicated by a solid blue light ○ ○ ● (Blue). After the blue light illuminates, keep holding the "code" button until all three lights flashing three times ● ● ● (Yellow + Red + Blue), then release the button.