



Technical Bulletin: 6

Revision: 1


Razor International Pty Ltd, Campbellfield VIC
service@razorinternational.com
1300 555 865

Wireless Remote Channels (ECAP14)


Affected Product: ECAP14 Controller

Wireless Remote Channel Programming:

1. Clear existing coding of wireless remote from truck & trailer controller.

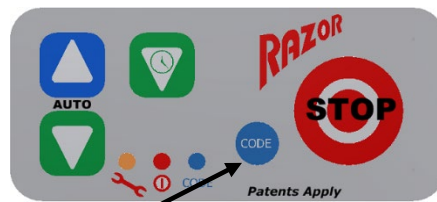

- **Truck:**


Press and hold the "Code" button (10 seconds) on the keypad of the truck controller. After the blue light illuminates for (5 seconds)    (Blue), keep holding the "Code" button until all three lights flash three times    (Yellow + Red + Blue).

- **Trailer:**

Repeat same process above.

2. Begin to synchronize the remote to both Truck and Trailer.

Note: there are two versions of remote with same function but different orientation which are vertical and horizontal as per below images.

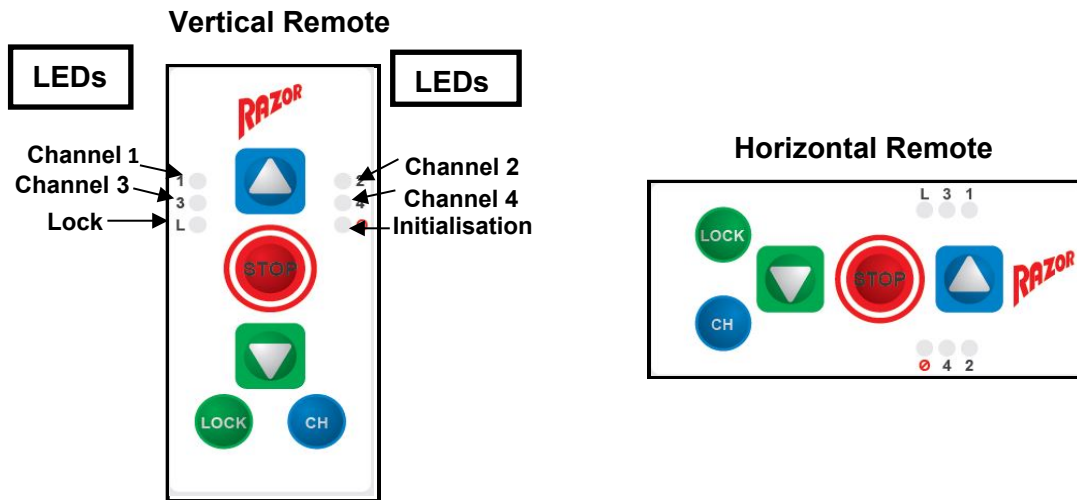

a) Process to begin pairing to both Truck & Trailer.

Press and hold "Lock" & "CH" buttons on the wireless remote for 5 seconds until the light No. 1 illuminates. Then, keeping finger on "Lock" button, release "CH" button, then, press "CH" button once until two Red lights illuminate (channel 1 & 2), then release "Lock" button.

b) Truck:

1. Press "CH" button to select CH1 (indicated by Red light on remote) on 1
2. Press and hold "Code" button on controller keypad until Blue light illuminates.
3. Press "UP" button on the remote three times. The main keypad of the controller should flash all three lights twice.

c) Trailer:

1. Press "CH" button to select CH2 (indicated by Red light on remote) on 2
2. Press and hold "Code" button on controller keypad until Blue light illuminates.
3. Press "UP" button on the remote three times. The main keypad of the controller should flash all three lights twice.

Note: To add a second Wireless Remote, complete Steps 1 & 2 again.