

RAZOR DECK OPERATING INSTRUCTIONS

RAISE DECK PROCEDURE:

1. PRESS STOP, RED LIGHT WILL FLASH UNTILL SYSTEM IS READY.

2. PRESS UP BUTTON TO DRIVE DECK UPWARD.

3. WHEN DECK IS INLINE WITH POST CUTOUT AT THE DESIRED HEIGHT. PRESS THE STOP BUTTON.

4. DRIVE DECK DOWN TO LOCK DECK INTO POSITION.



LOWER DECK PROCEDURE:

1. DRIVE DECK UP TO ALLOW ALL LOCKS TO FULLY RETRACT.

2. PUSH AND HOLD UNLOCK, FOR ALL LOCKS TO REMAIN DISENGAUGED.

3. PUSH DOWN TO DRIVE DECK DOWNWARD.

4. RELEASE THE UNLOCK BUTTON WHEN BOTTOM OF DECK IS LEVEL WITH THE PAINTED LINE UNDER THE POCKET AT THE DESIRED DECK HIGHT !

FAILURE TO FOLLOW ALL OPERATING INSTRUCTIONS OR WARNING LABELS WILL VOID YOUR WARRANTY!