





#072

RAZOR DECK OPERATING INSTRUCTIONS

RAISE DECK PROCEDURE:

1. PRESS STOP FOR 10 SECONDS, THEN THE SYSTEM IS READY TO BE OPERATED.

2. PRESS UP BUTTON TO DRIVE DECK UPWARD.



3. DRIVE DECK PAST REQUIRED CUTOUT AND PRESS STOP BUTTON

4. DRIVE DECK DOWN TO LOCK DECK INTO POSITION. IT WILL STOP AUTOMATICALLY. MAKE SURE ALL LIGHTS UNDER THE DECK ARE OFF.

LOWER DECK PROCEDURE:

1. DRIVE DECK UP TO ALLOW ALL LOCKS TO FULLY RETRACT.

2. PUSH UNLOCK FOR ALL LOCKS TO REMAIN DISENGAGED. THE LOCK INDICATOR LIGHT WILL ILLUMINATI.



3. PUSH DOWN TO DRIVE DECK DOWNWARD.

4. PRESS THE UNLOCK BUTTON WHEN BOTTON OF DECK IS LEVEL WITH REFLECTIVE TAPE AT THE REQUIRED CUTOUT. IT WILL STOP AUTOMATICALLY. MAKE SURE ALL LIGHTS UNDER THE DECK ARE OFF.

FAILURE TO FOLLOW ALL OPERATING INSTRUCTIONS OR WARNING LABELS WILL VOID YOUR WARRANTY: