



Note: Torque arm is not part of the kit and needs to be ordered separately. For each commercial leg, there will be a unique torque arm to match (Not limited to below table)

Torque Arm Table	
Part Number	Description
T-A000	Torque Arm - Jost A400
T-AR000	Torque Arm - Jost A400 Reverse
T- M000	Torque Arm - Jost Modul B
T-MR000	Torque Arm - Jost Modul B Reverse
T-U000	Torque Arm - Jost UL500
T-UR000	Torque Arm - Jost UL500 Reverse
T-H000	Torque Arm -Holland Mark V
T-HR000	Torque Arm - Holland Mark V Reverse

PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	Refer separate "Torque Arm Table"	Torque Arm
2	1	E-M-1000	Delta Bezel Housing Kit
3	1	E-W4-H	4 Button Horizontal Remote
4	1	DII-L	Delta II Leg Drive(Harness not shown)
5	1	OR 24x 2	Front Cap O-ring
6	1	D-0220DII	Front Cap(DII)
7	1	D-0350	Rear Collar
8	1	PN00064A	Drive Pin 10 x 36 ZP
9	1	P-1000R	Razor Battery KIT(Harnesses not shown)

Remove all burrs and sharp edges

LINEAR DIMENSION TOL. (ISO-2768-m)						ANGULAR DIMENSION TOL. (ISO-2768-m)				
Nominal Length Range						Nominal Length Range				
FROM	0.5	>6	>30	>120	>400	0	>10	>50	>120	>400
TO	6	30	120	400	1000	10	50	120	400	
TOL.	±0.1	±0.2	±0.3	±0.5	±0.8	±1°	±0°30'	±0°20'	±0°10'	±0°5'



Designed by Ivan	Checked by	Approved by - date	Material	Date 16/09/2022	Sheet 1 / 1
Razor International Pty Ltd			Razor DII Leg Kit		
Drawing Number DII-5L23			Edition		