


# Razor RII/DII Rollover Tarp Standard Installation Instruction

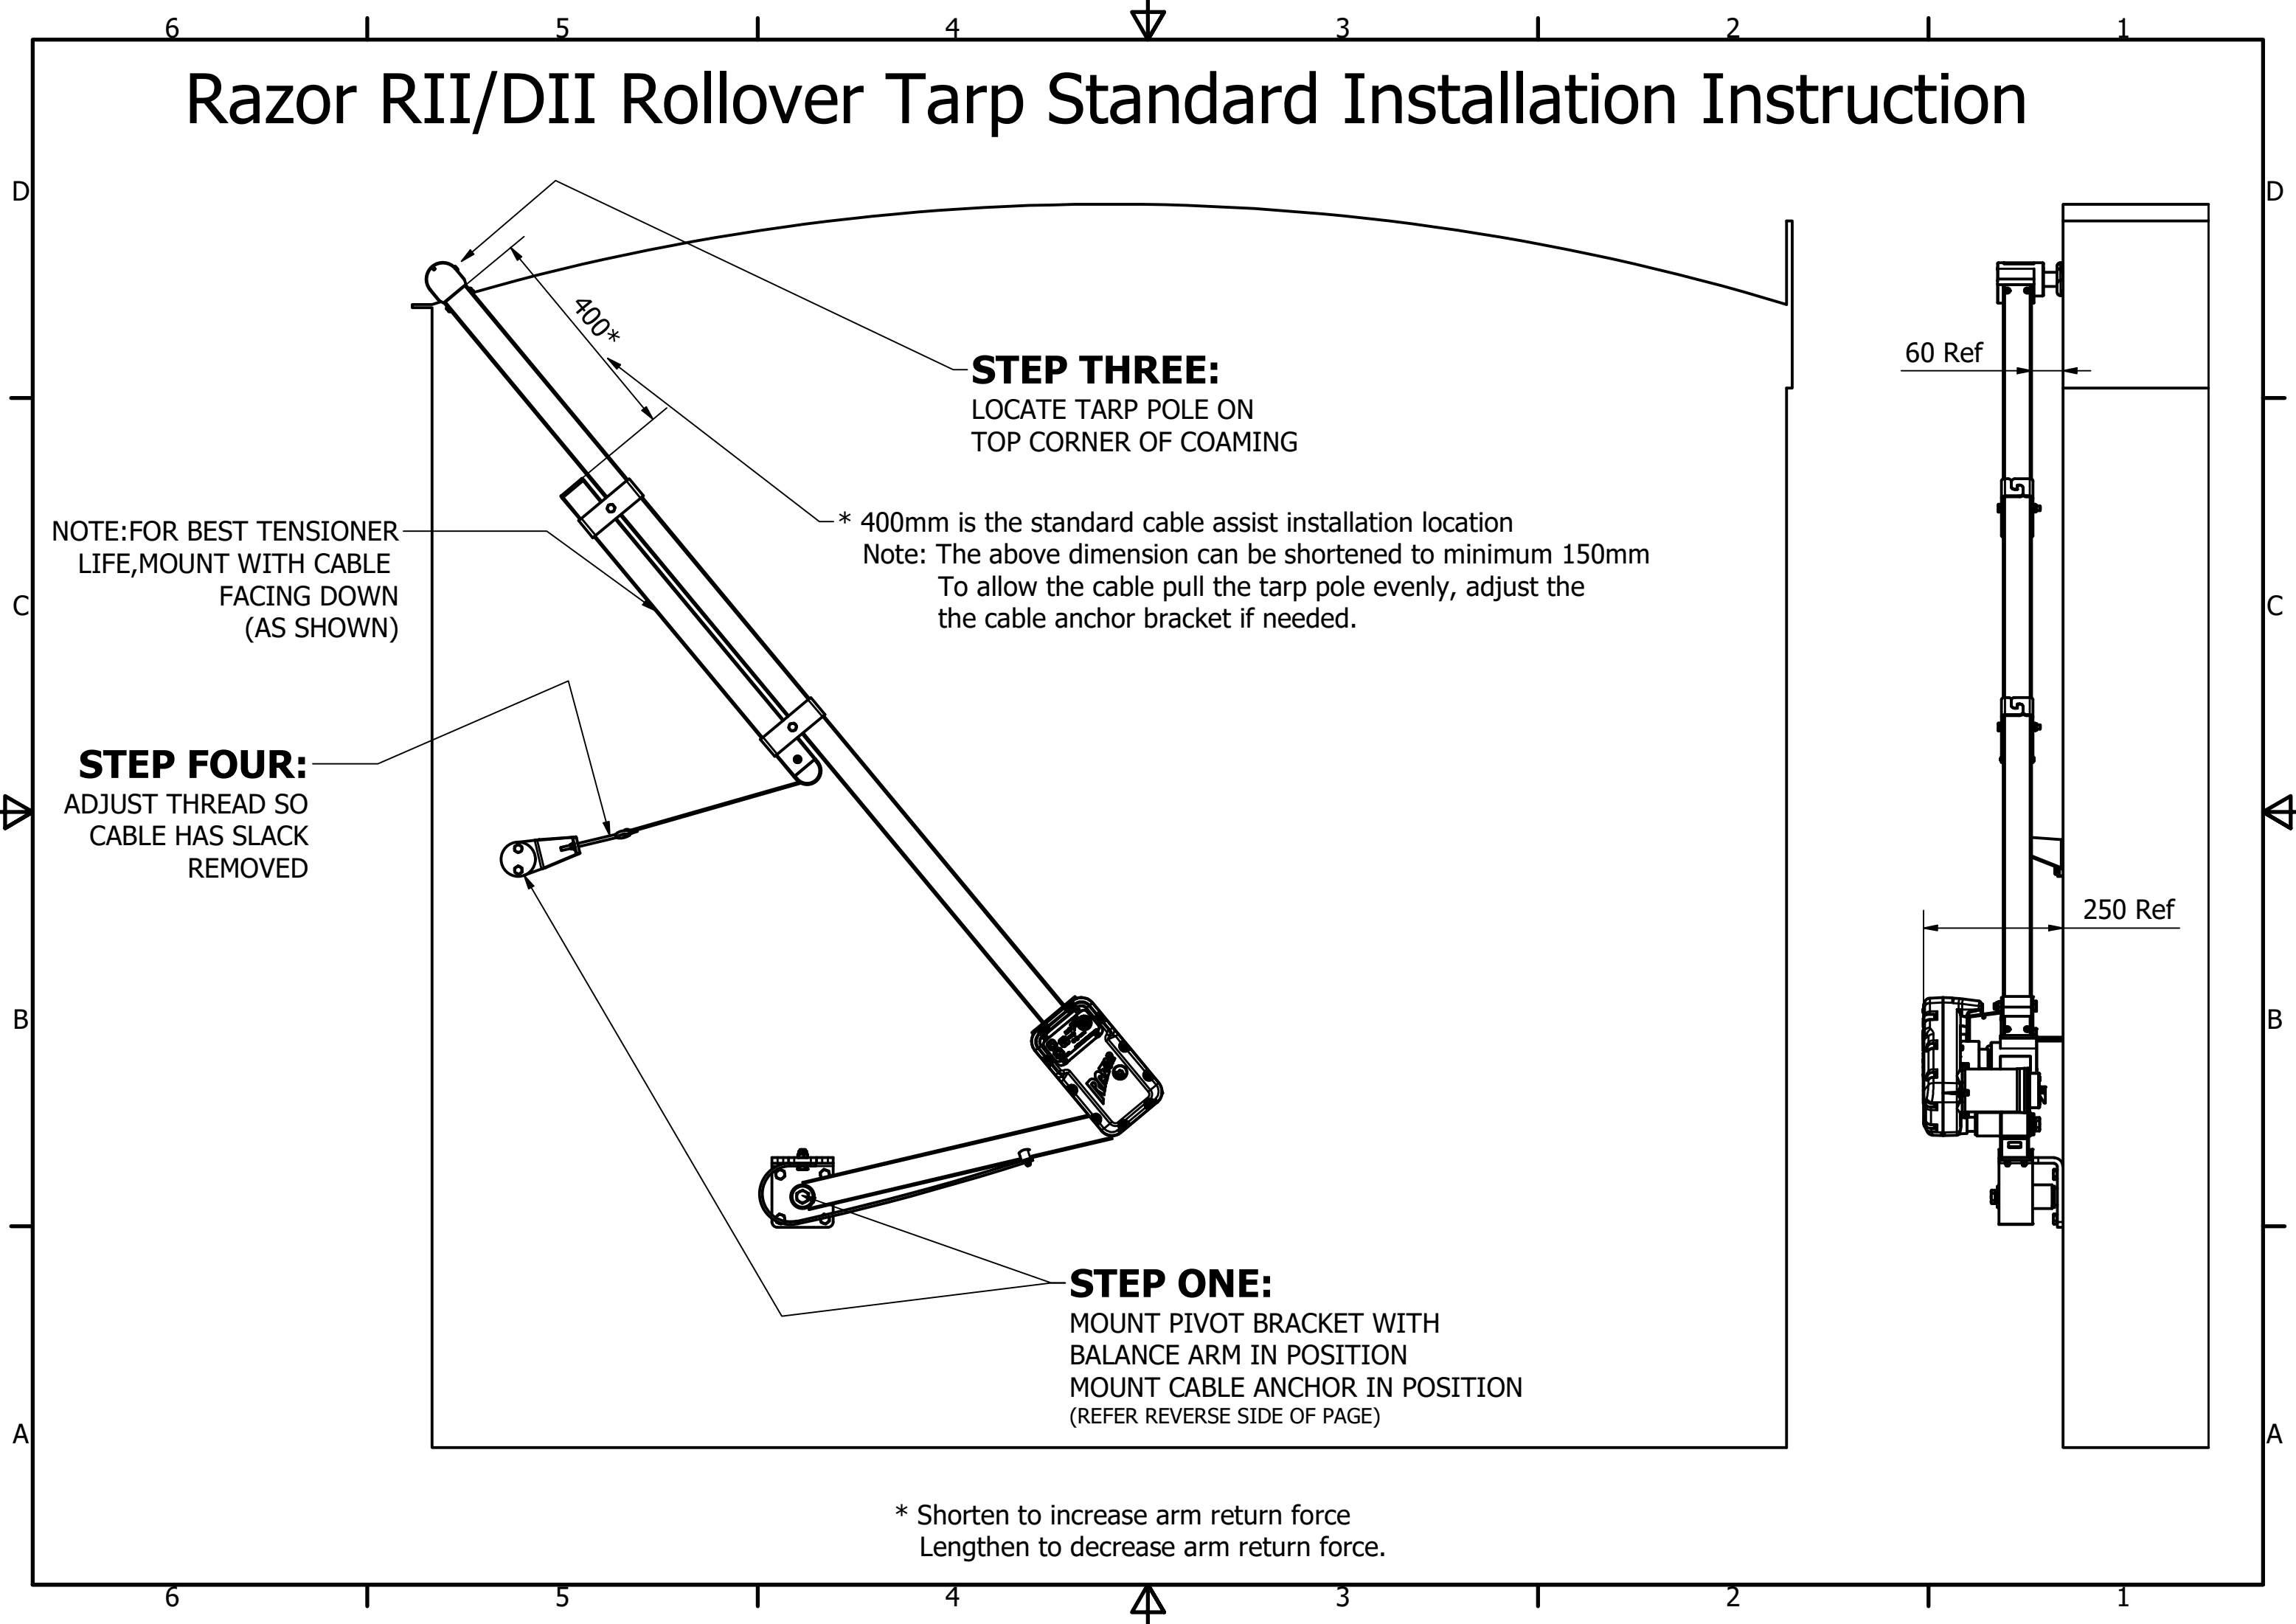

**STEP THREE:**  
LOCATE TARP POLE ON  
TOP CORNER OF COAMING

\* 400mm is the standard cable assist installation location  
Note: The above dimension can be shortened to minimum 150mm  
To allow the cable pull the tarp pole evenly, adjust the  
the cable anchor bracket if needed.

NOTE:FOR BEST TENSIONER  
LIFE,MOUNT WITH CABLE  
FACING DOWN  
(AS SHOWN)

**STEP FOUR:**  
ADJUST THREAD SO  
CABLE HAS SLACK  
REMOVED

**STEP ONE:**  
MOUNT PIVOT BRACKET WITH  
BALANCE ARM IN POSITION  
MOUNT CABLE ANCHOR IN POSITION  
(REFER REVERSE SIDE OF PAGE)

\* Shorten to increase arm return force  
Lengthen to decrease arm return force.

60 Ref

250 Ref

6

1

5

1

4

3

1

2

1

1

6

1

5

1

4

3

1

2

1

1

D

C

B

A

D

C

B

A