




Battery Kit Assembly (P-1000)


Affected Product: New style battery kits, P-1000/P-1000R.

Procedures:


1. Pull the battery cover out by lifting the metal drop latches and take all the components out of the battery box as per Fig 1 show.

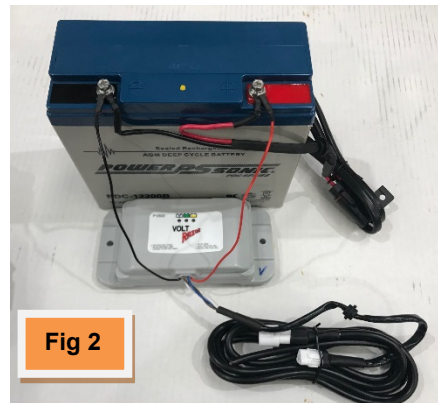

2. Connect charger and battery harness to the battery terminal as per Fig 2.
Note: Ensure red positive wires and black negative wires connect to battery positive and negative respectively.
3. Undo the battery clamp and fit the connected battery from Fig 2 to the battery box as per Fig 3.
(Note: Ensure the battery harnesses are fit inside the locator tabs(Marked with "Ⓢ") and charger harnesses are fit inside the locator tab(Marked with "Ⓜ"))

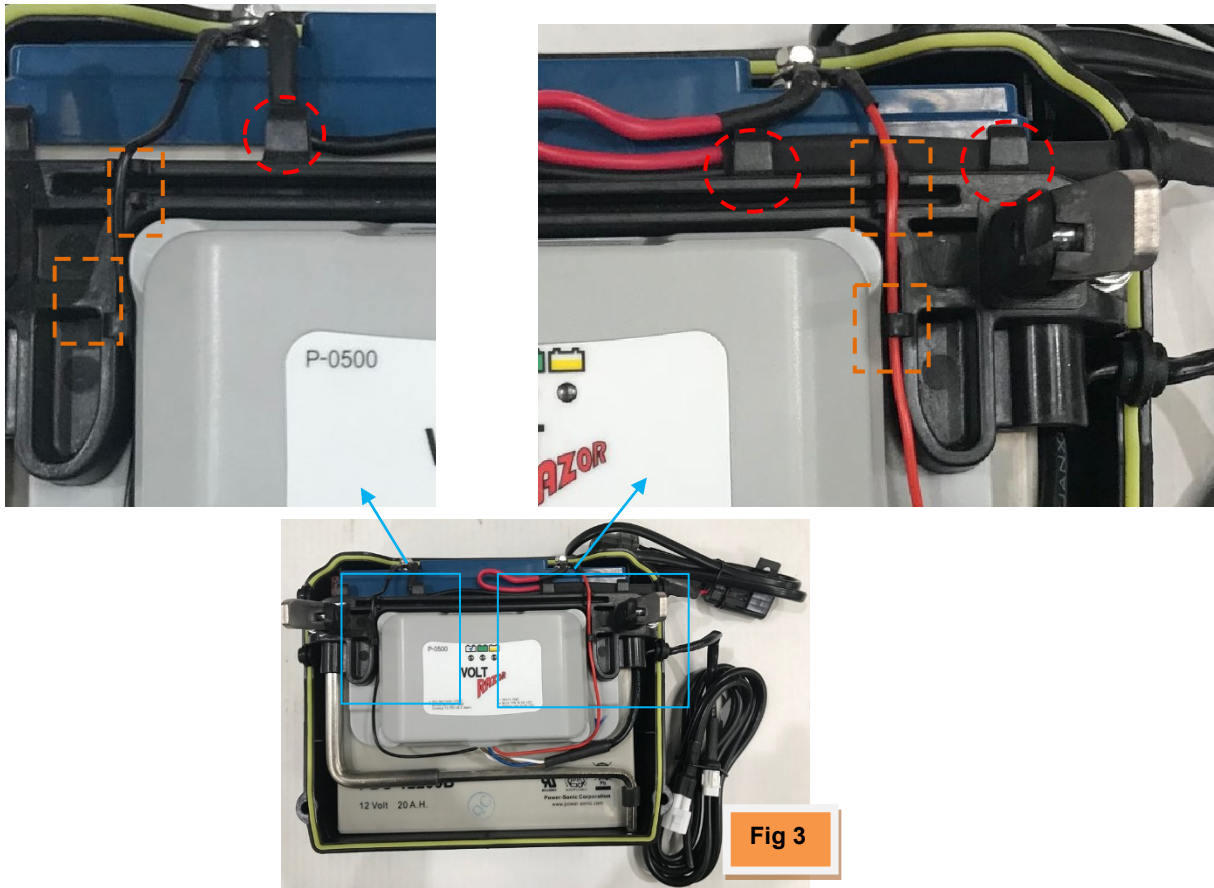

4. Fit the battery cover back to the battery box and ensure the rubber seals (marked with red dashed circle in Fig4 and 5) are in position.

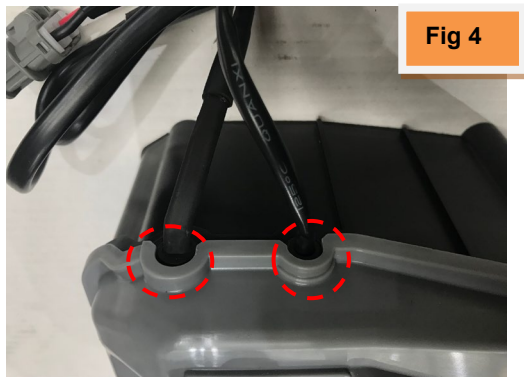

5. Then, Power kit is ready to be installed.