



Technical Bulletin: 26


Revision:4

Razor International Pty Ltd, Campbellfield VIC
service@razorinternational.com

1300 555 865

4 Button Remote Pairing & De-Pairing (DELTA II)

Affected Product: D1.5 / DII controller and Controller Module(CII)

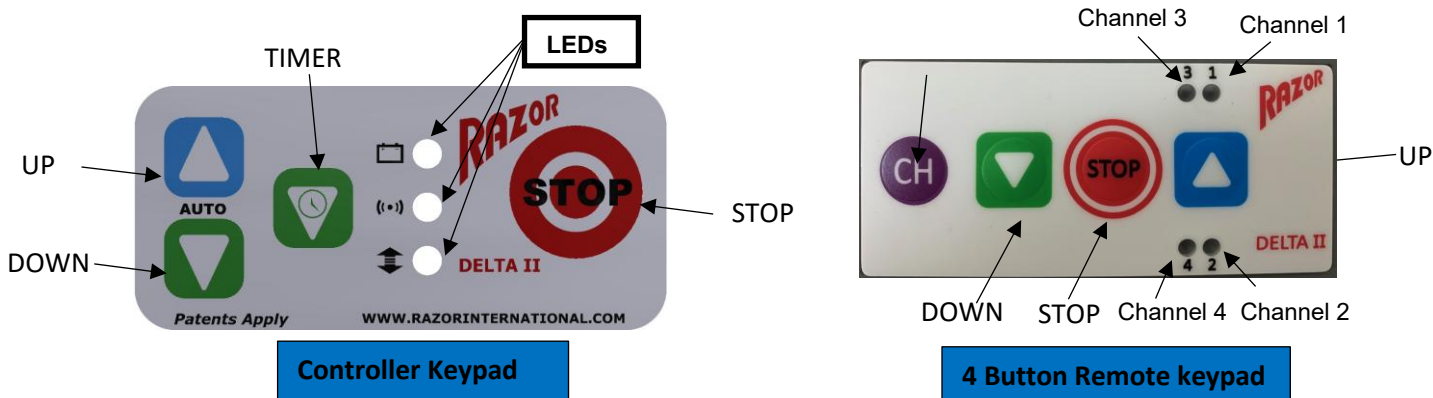

PAIRING PROCEDURE

CONTROLLER: Press and hold “STOP” button, then press and hold “TIMER” buttons for 3 seconds until double beep is heard. Green LED (the middle Led (••)) will flash twice per second. (**Note:** Pairing mode on the controller will remain active for 90 seconds or until pairing with remote is made)

REMOTE: Press & hold “STOP” button, then press and hold “Up” button on the remote until a three quick beep is heard/green LED flashes and release buttons, a further long flash of green LED indicates pairing is complete (**Note:** Pairing mode on the remote will remain active for 8 seconds or until pairing is made with remote)

TO CHANGE CHANNEL

Please note that channels (Default Channel is “1”) need to be activated and paired prior to changing channels.

- Channel activation & pairing:** Press “STOP” button once and release, then press and hold” CH” button for 5 seconds indicating by the corresponding number Led glows every 1 second.(ie: Channel 2 activated---- Number “2” glows). Then pair as per the above pairing procedure.
- Change channel:** Press “STOP” button once and release, then momentarily press “CH” button on the remote, indicating by the corresponding number Led glows every 1 second

DE-PAIRING PROCEDURE

REMOTE: Press and hold “STOP” button, then press and hold “Up button on the remote for the corresponding channel, initially a double beep is heard/green LED will flash and keep holding” Stop” & “Up” button until a three long beep is heard. Then the remote now is de-paired from the controller.

If the above pairing and de-pairing are not successful, repeat the procedures.